

# 10756

MAKE AND MODEL	YEAR	MOUNT STYLE
GM 2500-3500 Crew S/B	2016	Front Split



**Tools Required:** 1/2 Ratchet or Impact Gun, 18mm Socket & Long Exts, 3/4 Socket or Wrench, 5/8 Socket or Wrench, Drill and 1/2" Bit.

## INSTRUCTIONS:


- 1) Locate front box mount bolt and remove, using a long 1/2 drive extension and 18mm socket. Slide box bolt up into camper tie down BRKT#2. Position tie down BRKT#2 up into box mount, loosely reinstall box bolt. Work J hook end into factory cut out hole in bottom of truck frame. Loosely attach using one 1/2 flat sae washer and one 1/2 nylock nut.
- 2) Take angle BRKT#4, loosely attach to main BRKT#2 with one 1/2 flat sae washer and one 1/2 nylock nut. Position angle BRKT#4 up against cab mount, mark hole and drill out to 1/2" diameter. Make sure to mark hole so there will be ample clearances above E brake cables on driver's side. Attach to cab mount using one 1/2 x 1-1/2 bolt, 2 flat sae washers and one 1/2 nylock nut. Tighten angle BRKT#4 to cab mount then tighten to main tie down BRKT. Tighten box bolt then lastly tighten 1/2 J bolt, making sure it is securely hooked into truck frame factory cut out.
- 3) Slide L BRKT#3 up into main BRKT#2 adjust to correct adjustment hole for height your application. Install with 1/2 x 3-1/2 bolt, 2 flat SAE washers and one nylock nut and tighten. Slide ext tube #1 into L BRKT#3 adjust and secure with 7/10 set bolt.

Note: Check and re-tighten all nuts and bolts after initial use.

**WARNING: CAMPER NOT TO EXCEED CAPACITY OF VEHICLE**

# 10756

## GM 2500-3500 Crew S/B Front Split Mount

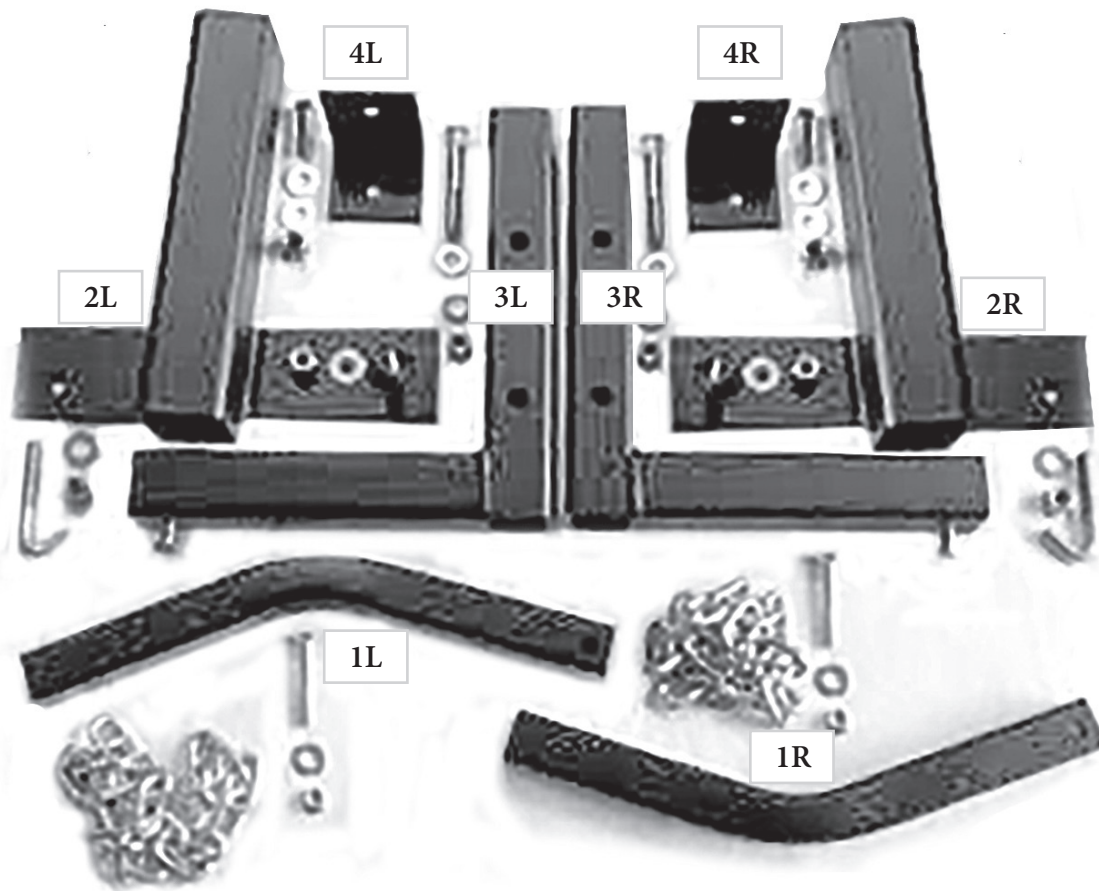

### LEFT SIDE:

1L) Part No: 756-T-S04 Left Ext. Bar  
2L) Part No: 756-2L Left Mounting BRKT  
3L) Part No: 756-3L Left Drop Down BRKT  
4L) Part No: 756-4L Left Angle BRKT

### RIGHT SIDE:

1R) Part No: 756-T-S04 Right Ext. Bar  
2R) Part No: 756-2L Right Mounting BRKT  
3R) Part No: 756-3L Right Drop Down BRKT  
4R) Part No: 756-4L Right Angle BRKT

### MOUNTING HARDWARE:

Part No. CTB007 (2-  $\frac{1}{2}$  x 1  $\frac{1}{2}$  Bolts)  
Part No. T-502 (2-  $\frac{1}{2}$  J Bolt Shortened)  
Part No. CTB0029 (2-  $\frac{1}{2}$  x 3  $\frac{1}{2}$  Bolts)  
Part No. CTW0025 (8-  $\frac{1}{2}$  Nylock Nuts)  
Part No. CTW0023 (12-  $\frac{1}{2}$  Flat SAE Washer)  
Part No. CTB005 (2-  $\frac{7}{16}$  x  $\frac{3}{4}$  Bolts)

### COMPLETE CHAIN KIT (CTCK - CT - 02500)

Includes Two - 30" Chains; Two -  $\frac{3}{8}$  x 2 $\frac{1}{2}$  Bolts; Two  $\frac{3}{8}$  Flange Nuts;  
Two  $\frac{3}{8}$  Flat Washers