
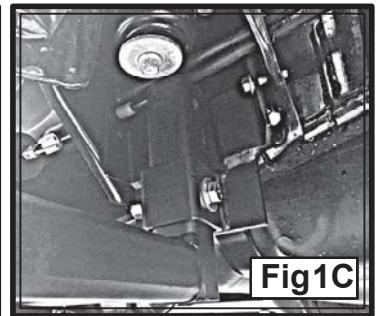
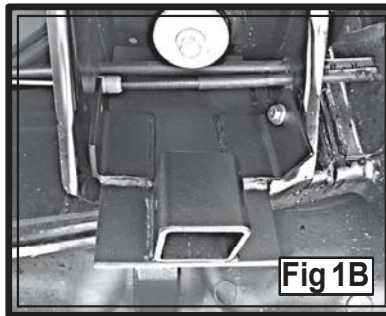


# 10760

Make and Model	Year	Mount Style
DODGE 2500/3500 Long Box/Short Box	2017 / 2018	Front Split

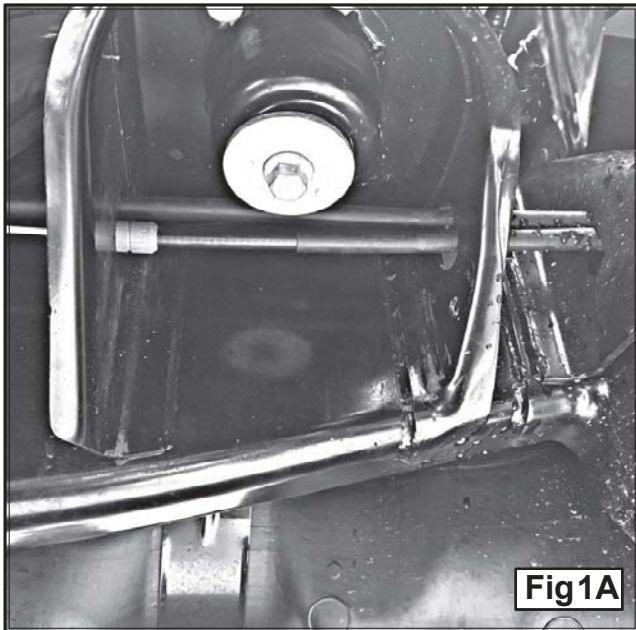

**Tools Required:** 3/4" Socket, 5/8" Socket, Wrench, Drill, 9/16" Drill Bit.

## INSTRUCTIONS:


- 1) Locate driver side rear cab mount. (Fig 1A)
- 2) Install driver side mounting bracket by sliding mounting bracket up into the driver side rear cab mount. The mounting bracket should slide up all the way touching the top of the cab mount. (Fig 1B)
- 3) Using a **Sharpie** marker, mark the two mounting holes. Next remove the mounting bracket completely. Using a drill, drill the two marked mounting holes using a 9/16" diameter drill bit. Next reinstall the mounting bracket by repeating step (2)
- 4) Next install two 1 1/2" X 1/2" bolts, two 1/2" flat washers, and two 1/2" Nylock nuts to the two mounting holes. Using a 3/4" socket and wrench tighten bolts securely. This kit includes eight extra 1/2" flat washers if needed to reduce the space between the inside of the cab mount holes, and the outside of the mounting bracket holes.
- 5) Next Install the "L-Bracket". First determine which holes to align, this depends on if the truck has running boards, or has no running boards. Once holes are aligned install one 3 1/2" X 1/2" bolt, one 1/2" flat washer, and one 1/2" Nylock nut. Using a 3/4" socket and wrench, tighten bolt securely. (Fig 1C)
- 6) Insert extension bar into the "L-Bracket" with the two 13/32" holes away from truck, and sitting left and right from each other, not sitting up and down. Move the extension bar out enough so that installed chains will not come in contact with the body of the truck. Next locate the 7/16" threaded hole on the bottom of the "L-Bracket". Install one 7/16" X 3/4" bolt into the 7/16" threaded hole. Using a 5/8" socket tighten bolt securely. (Fig 1D)
- 7) Next install one 2 1/2" X 3/8" bolt, and one 1/2" flat washer into one of the two 13/32" holes located at the end of the extension bar. Feed the bolt through the last chain link of the chain and out through the second 13/32" hole. Hand tighten 3/8" flange nut onto bolt. Using a 5/8" socket and wrench tighten securely. (Fig 1D)
- 8) Repeat steps (1) – (7) to install passenger side camper tie down.

**Note: When drilling watch out for fuel and electrical lines. note: check and re-tighten all nuts and bolts after initial use.**

**WARNING: CAMPER NOT TO EXCEED CAPACITY OF VEHICLE**

# 10760

## DODGE 2500/3500 Long Box/Short Box-Front Split

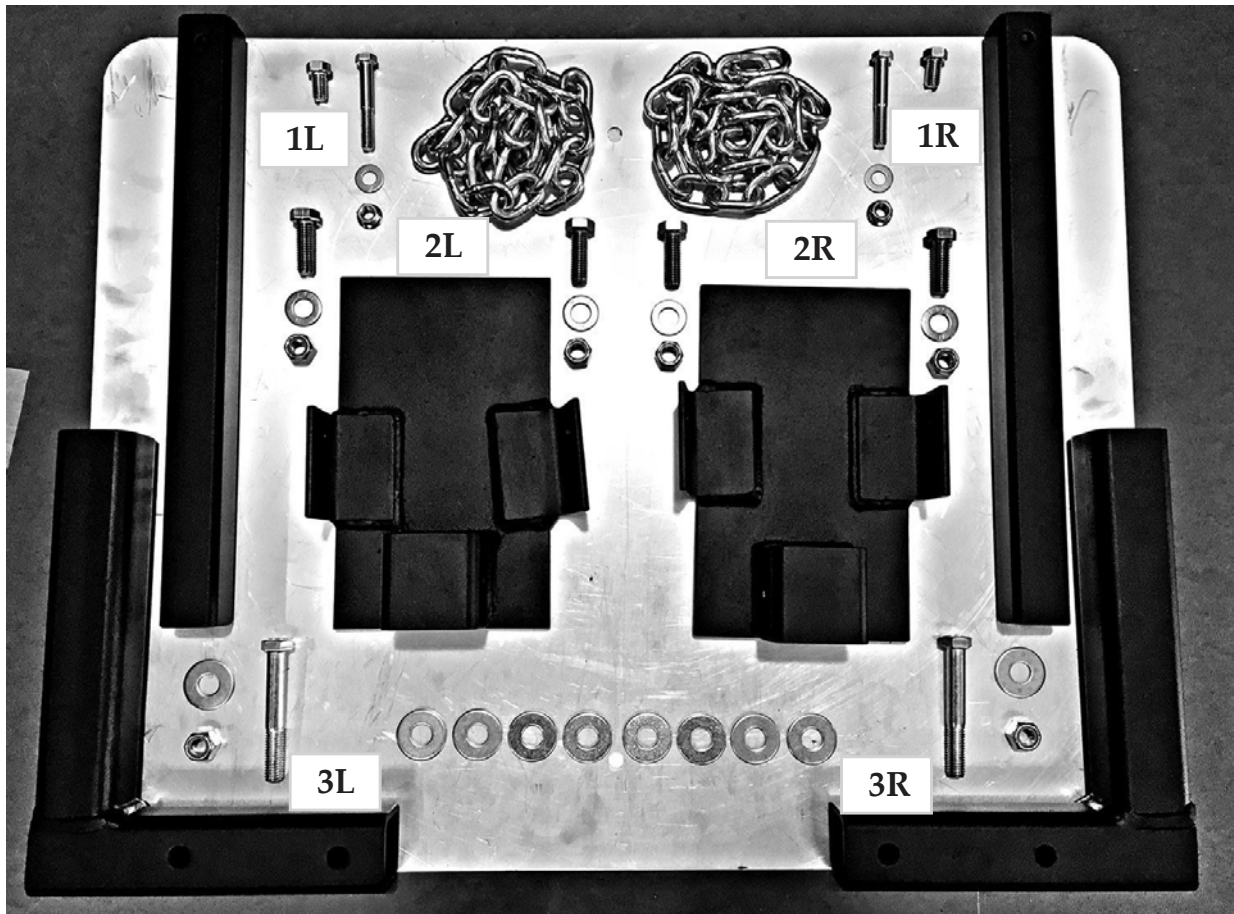

### LEFT SIDE:

1L) Part No: 760-T-S04 Left Ext. Bar  
2L) Part No: 760-2L Left Mounting BRKT  
3L) Part No: 760-3L Left Drop Down BRKT

### RIGHT SIDE:

1R) Part No: 760-T-S04 Right Ext. Bar  
2R) Part No: 760-2R Right Mounting BRKT  
3R) Part No: 760-3R Right Drop Down BRKT

### MOUNTING HARDWARE:

Part No. CTB0029 (2-  $\frac{1}{2}$  x  $1\frac{1}{2}$  Bolts)  
Part No. CTB008 (4-  $\frac{1}{2}$  x  $1\frac{1}{2}$  Bolts)  
Part No. CTB005 (2-  $\frac{7}{16}$  x  $\frac{3}{4}$  Bolts)  
Part No. CTW0022 (14-  $\frac{1}{2}$  USS Flat Washers)  
Part No. CTW0025 (6-  $\frac{1}{2}$  Nylock Nuts)

### COMPLETE CHAIN KIT (CTCK - CT - 02500)

Includes Two - 30" Chains; Two -  $\frac{3}{8}$  x  $2\frac{1}{2}$  Bolts; Two  $\frac{3}{8}$  Flange Nuts;  
Two  $\frac{3}{8}$  Flat Washers