


10763
2019 DODGE RAM/PW
FRONT SPLIT MOUNT

California
Immobilizer™

RAM 2500-3500 ALL BOX/CAB STYLES AND POWER WAGON

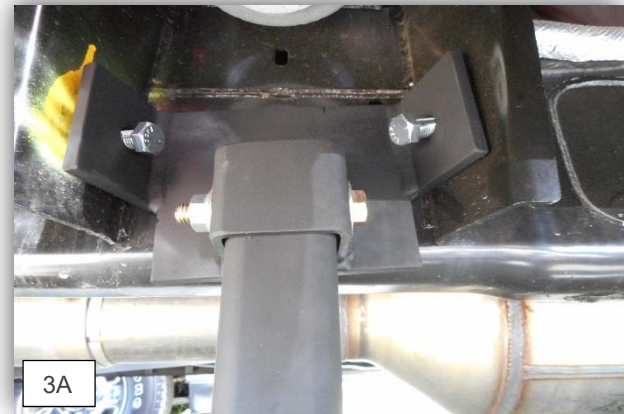

INSTRUCTIONS:

1. Locate rear cab mounts on either side of the vehicle (1A).
2. Fit up the camper tie down body inside the cab mount support (2A). Mark the drill location through the holes on the camper body.
3. Drill the support with a 9/16" bit and bolt the camper body into place with the two 1 1/2" bolts provided per side (2B).
4. Insert the "L-Bracket" into the camper body and choose the adjustment hole that allows the bracket to clear the side steps. Insert the 1/2" x 3 1/2" Bolt and tighten (3A).
5. Once all the bolts have been tightened and secured insert the extension bar into the opposite end of the "L-Bracket" and secure into place with a 7/16" x 3/4" bolt.

(SHAPE OF CAMPER PLATE MAY VAREY BETWEEN POWER WAGON AND RAM MODELS)

When drilling watch out for fuel lines, electrical, and brake cables. Check and re-tighten bolts after initial use.

WARNING! DO NOT EXCEED CAMPER CAPACITY OF VEHICLE