


10763  
2019 DODGE RAM/PW  
FRONT SPLIT MOUNT



**10763 COMPLETE PARTS LIST**

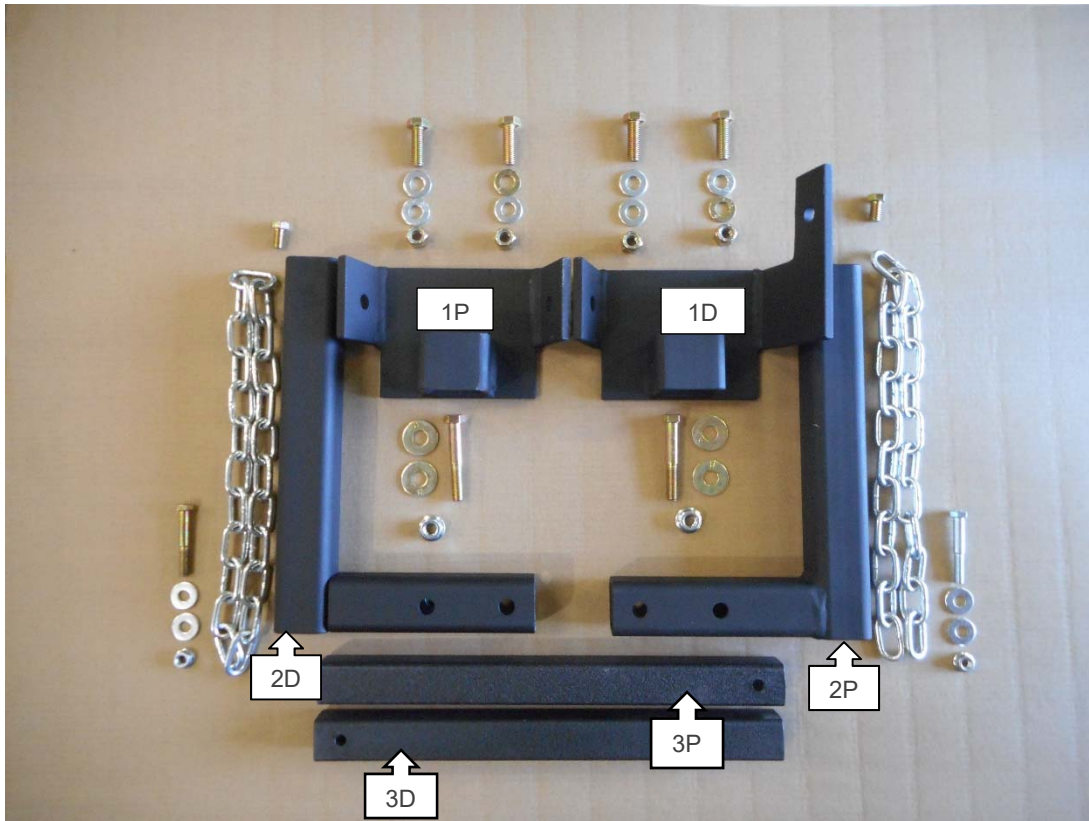

**(SHAPE OF CAMPER PLATE MAY VAREY BETWEEN POWER WAGON AND RAM MODELS)**

DRIVER SIDE:

- 1D) Part No: D19CIBD: CMP Body
- 2D) Part No: D19CILBD: L-Bracket
- 3D) Part No: D19CINCD: Extension Bar

PASSENGER SIDE:

- 1P) Part No: D19CIBP: CMP Body
- 2P) Part No: D19CILBP: Large Extension
- 3P) Part No: D19CINCP: Extension Bar

MOUNTING HARDWARE:

- Part No: \_\_\_\_\_ (3-1/2"x1/2" Bolt) x2
- Part No: \_\_\_\_\_ (1-1/2"x1/2" Bolt) x4
- Part No: \_\_\_\_\_ (7/16"x3/4" Bolt) x2

- Part No: \_\_\_\_\_ (1/2" Flat Washer) x12
- Part No: \_\_\_\_\_ (1/2" Locking Nut) x4

CHAIN KIT:

- Part No: \_\_\_\_\_ (2-1/2"x3/8" Bolt) x2
- Part No: \_\_\_\_\_ (3/8" Flat Washer) x4
- Part No: \_\_\_\_\_ (3/8" Flange Nut) x2